		217
STB通信設定方法 (Wi-Fi接続版)		<b>ケーブルベーシックSTB</b> Technicolor BD-V5700R
1.	2.	3.
メニュー ※ 戻る d VOD ブラウザ デーク 予約一覧 10秒 ◀◀ ►► 30秒 第0	3(93>565) 150 150 150 150 150 150 150 150	###5>#### 番相執難設定 設置設定 設置設定 設置設定 設置設定 設定する まくまう みる 分析する 単度する つ気がる 設定する ほりに日(の) 17:12
リモコンの <b>「メニュー」</b> ボタンを押す。	メニュー画面が表示されます。 「◀▶」で <b>「設定」</b> を選んで「決定」。	設定画面が表示されます。 「▲▼」で <b>「通信設定」</b> を選んで「決定」。
4. 5. 6.		
>>7-24-26     8/16 (s)     -1712     (3)-5-0988/312.8 JR(1.5.5.)     (3)-5-0988/312.8 JR(1.5.5.)     (3)-5-0988/312.8 JR(1.5.5.)     (3)-5-0988/312.8 JR(1.5.5.)     (3)-5-0988/312.8 JR(1.5.5.)     (3)-5-0998/312.8 JR(1.5.5.)	2014年 日前の 1712   2010-0385384 881(48. (1910-0100000000000000000000000000000000	メンパシーク加速が加速を訪します。     8/16 (3)     17/2 -     シンパシロボーク加速が加速を訪します。     シンパンロボーク加速が加速を訪れます。     シンパンロボークリーク加速加速を訪れます。     シンパンロボークション・シーク・シークション・シーク・シーク・シーク・シーク・シーク・シーク・シーク・シーク・シーク・シーク
「▲▼」で「ネットワーク接続設定」を 選んで「決定」。	接続方式が「無線LAN接続」になって いる事を確認ください。 *異なる場合は「無線LAN接続」に変更ください	画面右下にあります「無線LAN設定」を ふ。選んで「決定」。

.



(変更後、再起動必要)







4.	5.	6.
設定 ♥ 45k7-5k1/39-49+ ● 7895-k109+39+ ■ 779 ■ 797 ■ 797 ■ 94(25) ■ 1425-2679+79 ■ 3-9-52	#γFワ-0とインター#γF   mn   #####   ####################################	******のパスワ ードを入力してください ・ 1 2 4 5 6 7 8 9 0 0 e a k c d 6 9 a h i j e 100 k i m n 0 8 8 7 5 1 - ・ u v w s y z 1 2 2 27 6 0 0 0
設定画面が表示されます。 「 <b>ネットワークとインターネット」</b> を 選んで「決定」。	周辺のWi-Fi電波一覧が表示されます。 お客様のWi-Fiの <b>「SSID」</b> を選択。	「パスワード」を入力し、「決定」を押す。

